

Maintenance

Regular maintenance of product, use alcohol cotton swabs defatted cleaning lenses, to optimize the efficacy output. Note don't use wetted cloth or other chemical solvents wipe lens. Depending on operating environment and use frequency to clean the light, suggest every 15 days clean again.

Warning

Please don't use eyes to see light directly

In any installation and maintenance work, please confirm the power already cut off.

Note

This product in the factory works good, packing integrity. All users should strictly abide by the above statement warnings and operating instructions, any damage caused by misuse, the company does not guarantee. Ignore manuals caused fault and problem also is not responsible for the dealer.

LED Light Warranty Card

This product adopts high brightness transistors, Users in the normal use of this product warranty for one year, lifelong maintenance, Man-made and natural disasters not warranty scope, collect maintenance accessories expenses, when the product warranty please cut allied with product factory sent back together.

Item name:	Buy date:	Invoice NO.:
Warranty period: 200 year month to year month		
User name:	Detailed Address:	
Company:	Tell:	

274-PP15-25

18 LED Slim Par light

User's Manual



Specifications :

Light source: 18pcs*1W RGB led lamp

Channel: 4-7Ch

DMX512/Sound activation/Master-slave/Auto-run

All functions and operations can be finished by Manul on display without any DMX controller.

Menu Operation

Enter into menu by pressing the menu button, and select the menu by the up and down keys, press the confirmation button to enter the lower level, by the up and down keys to select, and then press confirmation button to save and exit.

Specific Operation is as follows:

Set DMX address code:

1. Enter into menu by pressing the menu button, select ADDR by the up and down keys, and confirm to enter displaying AXXX. Modify it by the up and down keys, press confirmation button to save and exit, but press the exit button to exit without saving.
2. Enter into menu by pressing the menu button, select mode by the up and down keys, and confirm to enter. Select a variety of operation code by the up and down keys, ArUn is to run the machine model. Press confirmation button to save and run, but press exit button to menu item, and press it again to exit menu return to operation mode.

Parlight computer light channel table

channel	function	numerical value	show
CH1	light	0~255	All light
CH2	red	0~255	dark -bright
CH3	green	0~255	dark -bright
CH4	blue	0~255	dark -bright
CH5	Change colores	1~255	
CH6	strobe	1~255	slow-fast strob

Menu map

Menu	numerical value	show
R___	0~255	All light
G___	0~255	dark -bright
B___	0~255	dark -bright
F___	0~255	Strobe slow-fast
D___	001~512	DMX512
P___	000~255	slow-fast Colors change1
L___	000~255	slow-fast Colors change2
E___	000~255	slow-fast Colors change3
Sound	sound	sound