

- ①X Level indication for master
- ①Y **[PHONO1/LINE1]/[LINE2]**: Selecting the source from PHONO/LINE or LINE for channel 1.

AREA PANEL

- ②A Grounding screw.
- ②B **10VAC~300mA**: Power supply socket(10VAC~300mA)
- ②C **REC**: Recording out.
- ②D **MASTER**: Master out.
- ②E **LINE4**: Line4 input to channel 2.
- ②F **PHONO2/LINE3**: Phono/line input to channel 2.
- ②G **LINE3-PHONO2**: Selecting signal source from LINE3 or PHONO2 for channel 2.
- ②H **LINE2**: Line2 input to channel 1.
- ②I **PHONO1/LINE1**: Phono1/line1 input to channel 1.
- ②J **LINE1-PHONO1**: Selecting signal source from LINE1 or PHONO1 for channel 1.

3. SPECIFICATIONS

LINE INPUT	Sensitivity: -25dB	Impedance: 2K Ohms
PHONO INPUT	Sensitivity: -45dB	Impedance: 47K Ohms
MIC INPUT	Sensitivity: -45dB	Impedance: 1K Ohms
MASTER OUTPUT	Sensitivity: 0dB	Impedance: 470 Ohms
PHONES OUTPUT	Sensitivity: +10dB	Impedance: 100 Ohms
POWER SUPPLY	AC10V, 50/60Hz (300mA), using power transformer along with this device only.	

PROFESSIONAL MIXING DEVICE

DJ-205

User's Manual

keep this manual for future needs.

1. FUNCTION

- 2 input channels, switchable to LINE, PHONO
- 1 MIC input high, mid and low tone adjusting
- 1 master output
- 1 headphone output
- 1 recording output
- Cross adjusting for master output
- High, mid and low tone adjusting for two input channels

2. PANEL INTRODUCTION

UP PANEL

- (1A) **MIC**: This is a MIC connector in TRS.
- (1B) **MIC LEVEL**: This is a knob to adjust MIC volume.
- (1C) **TREBLE**: This knob for adjusting MIC high tune
- (1D) **BASS**: This knob for adjusting MIC low tune
- (1E) **CH1**: Gain fader for channel 1.
- (1F) **TAKL**: This is a switch, If to be pressed, the output will be reduce 15dB.
- (1G) **TREBLE**: This knob for adjusting high tune of channel 1.
- (1H) **MID**: This knob for adjusting mid tune of channel 1.
- (1I) **BASS**: This knob for adjusting low tune of channel 1.
- (1J) **BEAT**: Beating indicator for channel 1.
- (1K) Cross fader for master.
- (1L) Cross fader for monitor.
- (1M) **BEAT**: Beating indicator for channel 2.
- (1N) **TREBLE**: This knob for adjusting high tune of channel 2.
- (1O) **MID**: This knob for adjusting mid tune of channel 2.
- (1P) **BASS**: This knob for adjusting low tune of channel 2.
- (1Q) **CUE-PGM**: This is a switch, if to be pressed down, head phones is from CUE, otherwise, form master.
- (1R) **CH1**: Gain fader for channel 2.
- (1S) **HEAD PHONES**: head phones connector in TRS
- (1T) **CUE LEVEL**: This knob to adjust monitor volume.
- (1U) **MASTER**: master volume.
- (1V) **POWER**: Power switch
- (1W) **[PHONO2/LINE3]/[LINE4]**: Selecting the source from PHONO/LINE or LINE for channel 21.

