

# MINI Laser Display System User's Manual

## Packing list

While receiving the product, please take carefully and check whether it was been destroyed on conveyance. after that, check the following parts.

- |                        |                   |                         |
|------------------------|-------------------|-------------------------|
| 1. 1* Laser Unit       | 2. 1* Adapter     | 3. 1* Handle-handleseat |
| 4. 1* Triangle Bracket | 5. 1* User Manual | 6. 1* M4 Screws         |

## Installation guide

1. Be sure that there is no flammable or explosive objects at the arrange of 1.5 meters leastways, while installation. keep 0.5meter away from wall at least.
2. Before installation, please make sure the power voltage matches the system rated voltage.
3. Be sure that the fan and exhaust is not blocked.
4. The laser display system should be fixed firmly.

## Safety guide

1. Must be operate according to the manual, do not disassemble the lamps yourself, if there have any problem, pls contact with the professional
2. The product should be installed immovably by professional technician
3. The system should be kept dry. please don't use the system in the condition of rain, wet or dust, need waterproof equipment in the open air.
4. Do not turn on or off the system frequently, and avoid keeping it working for a long time.
5. Prevent outer dangerous objects into the system, or there will be malfunction.
6. The system should be keep 1m far away from the objectshined at least
7. When transport the system again, please use the original package to avoid shaking

## Technical Parameters

- Adapter power supply: input 100-240VAC, 50/60HZ; output 5VDC, 1A
- Laser power:  $G \geq 20\text{mW}$ ,  $R \geq 60\text{mW}$
- Scanner angle:  $\pm 45$
- Control mode: Sound control, Auto control, stroble control
- Dimensions: 210\*145\*100
- Weight: 0.5kg

## Backboard sketch map

