

## 吸纸机使用说明书

1. 接到新购的机器后打开包装箱，检查产品是否有损坏或配件遗漏，如有问题请及时与供应商联系。
2. 把机器放在平稳的位置上，调节好所需要的角度，接通电源。
3. 此吸纸机分为手动及无线遥控两种控制方式，开关拨到 **MANUAL** 为手动控制，开关拨到 **WIRELESS** 为无线遥控控制。
4. 启动机器后，手持吸风管道放到彩纸上，瞬间大量的彩纸喷出。
5. 可选用金色、银色 PVC 薄片及彩纸作为耗材，彩纸的规格不能大于 5cm。

### Manual For Fan Mini Confetti

1. welcome to use fan mini confetti machine, receive new machine, open the packing and check accessories is well-found or not, if the accessories is not whole, please contact your Supplier.
2. put the machine on proper position, adjust jet machine inclination, connect the power supply
3. this machine provides with two control method, one on manual control, two on wireless control.
4. start-up machine switch, grip the pipet put in confetti paper, moment plentiful confetti paper emerge.
5. please choose gold, argent PVC lamelliform or confetti paper act on expendable, the paper standard can't exceed 5cm.

#### Manual for fan mini confetti Machine (Technology Parameter)

Voltage	电 压:	AC200V~240V 50Hz/60Hz
Power	功 率:	1800W
control	控 制:	Wireless control or manual
Size(mm)	尺 寸:	450 × 260 × 250 mm(L×W×H)
Weight(Kg)	重 量:	8Kg